

Battery Operated



Instruction Manual

DO not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact you local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones,the retailer is legally obligated to take back your old appliance for disposals at least free of charge. We reserve the right to make amendments.



Children should be supervised to ensure that they do not play with this appliance.

Keep your unit out of reach of children as it is not intended for use by children.

This appliance is bot to be used on,b,y or near children.

To prevent accidents and injury to you or damage to the unit -when your product is in use,keep it away from hair on your scalp,your eyebrows,eyelashes as well as clothes,brushes,wires,cords,shoelaces,etc.

If you have any medical conditions,issues,questions or any sensitivity whatsoever,we strongly advise you to consult with your health care provider before using this product.

If you have a pacemaker,consult with your health care provider prior to use.

Do not continually rub the unit on the same area or apply strong pressure.

Keep the protective cover on your unit when it is not in use.

Do not use your unit outdoors.

Do not use your unit where aerosol products or oxygen is being used.

Do not place or store your unit in direct sunlight. Please store your unit in a cool dry place at a temperature between 0-40 C.

Keep the appliance dry when it is not in use and do not store your unit where it can fall into a tub or sink of water.

Never use your unit if it has been damaged or submerged into water.

Always turn your unit "OFF"when it is not in use and before cleaning it.

Do not use this unit if the roller is damaged as this could lead to injury.

Do not turn your unit on if the roller is not attached.

Do not drop or insert anything into any opening of the unit.

Household use only.

This appliance is not intended to be used by person (including children)with reduced physical,sensory or mental capabilities,or lack of experience and knowledge,unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Charge the roller as needed. Rollers last for a few sessions depending on frequency of use and size of area being treated.

The product is ONLY for use on the feet and heels. Do not use this device anywhere else on the body.

Do not use on skin that is red,irritated,inflamed,infected or blistered.

Do not use on warts.

Please keep these instructions for future reference.

Each roller is recommended for one person only.

For hygienic reasons,the roller should not shared with others.

Do not use if you have diabetes or poor blood circulation.

If you have any skin conditions or other medical issues,please consult with your physician prior to use.

Do not use on skin for more than 2-3 seconds at a time.

Do not use the roller when you find there are worn or nicked edges on the roller.

Before using your product please read all there instructions carefully and completely.

WARNING/IMPORTANT

CLEANING

- The roller is water resistant,it can be rinsed under water for cleaning but it is not waterproof.
- Do not submerge the unit into water,this may cause damage to the unit.
- 1.Clean unit after each use
 - 2.Turn the unit off.
 - 3.Remove the protective cover and the roller from the unit. Rollers can be washed under water for cleaning. Use the provided mini brush.
 - 4.Rinse the roller under the tap for 5-8 seconds. Wipe the unit with a clean dry cloth.
 - 5.Replace the roller and protective cover.

HOW TO USE

Product is designed for smoothing coarse skin on the feet and heels(fig.4).

Do not use this device anywhere else on the body.



Note:Only use the roller on dry skin.

- 1.Wash and clean the skin and dry fully
Note:Do not use on broken or bleeding skin.
- 2.Insert the roller into the unit.For instruction on removing and replacing the roller,see section 'Changing the Roller'
- 3.Remove the protective cover from the unit and it is ready to use

CHANGING THE ROLLER

The roller contains fragile parts-please handle them with care.

Please take extra care when replacing the roller.

Note:Rollers that are broken or worn may cause damage to the skin.

Change the roller as needed for best results.Rollers last for a few sessions depending on frequency of use and size of area being treated.


Replace the roller when you find any defects or when you find them less effective.

Make sure the unit is turned off before replacing the roller.

- 1.Remove the protective cover by holding machine.

2.To remover the roller,use one hand to grip the device and push down the release button on the side of unit.amd the other hand to take the roller out.

3.Place the new roller head onto the device and push down firmly until it's in place. Check that it has been firmly installed with no signs of loose parts.

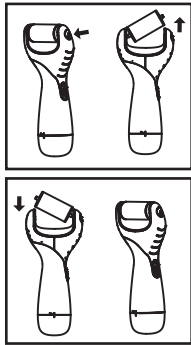

GENERAL DESCRIPTION OF PARTS

